

01/W Series	Initialization: Hold Reset and Compare while turning it on.	Preload: Global screen 7 Press G then E	Version Check: Hold Reset while turning it on.
03R/W	Initialization: Hold Edit and 1 while turning it on.	Preload: Global screen 5D, then select "OK".	Version Check: Hold +1 and -1 while turning it on.
05R/W	Initialization: Hold Edit and 1 while turning it on.	Preload: Global Screen 5A, then select "OK".	Version Check: Hold Edit and Global/Multi while turning it on.
168RC	Initialization: Hold leftmost Knob under screen and Up and Down while turning it on.	Preload: Factory data must be transmitted and returned via SysEx dump.	Version Check: Given on power up.
A1	Initialization: Hold Write and -1 while turning it on.	Preload: Card Load (SPC0A1)	Version Check: Hold Write while turning it on.
A2/A3	Initialization: Hold Chain/Effect and B while turning it on.	Preload: Hold Up and Down arrows while turning it on. Press	Version Check: Hold Utility, Up and A while turning the unit on. Press F. Set M/R to M/S and D/R to D/S. Hold Utility and F.
A4	Initialization: Same as Preload process	Preload: Hold Bank Up and Write while turning it on. PL appears, press write again.	Version Check: N/A
A5	Initialization: N/A	Preload: Hold Mode Footswitch and Write while turning it on. Press Footswtich 1, F is dispayed on screen.	Version Check: N/A
AX10G, B, A	Initialization: N/A	Preload: Hold Write while powering up. Press Write again once the screen indicates "LD"	Version Check: N/A
AX30G,B	Initialization: N/A	Preload: Hold Param/Value and Compare/Write while turning it on. Then Compare/Write once again.	Version Check: N/A
AX100G	Initialization: N/A	Preload: Hold FX Select EXIT button while turning it on. Press write button.	Version Check: N/A
AX1000G	Initialization: N/A	Preload: Hold Bank footswitch and Exit button while turning it on. Press Write button to load the factory programs.	Version Check: N/A
AX1500G	Initialization: N/A	Preload: 1. Hold down Bank footswitch EXIT button while turning it on. Then press Write button.	Version Check: N/A
AX1G/B	Initialization: N/A	Preload: Hold down the left arrow key and the "+" while powering on. Then press the "+" button again.	Version Check: N/A
AX300G/B	Initialization: N/A	Preload: Hold Param/Value and Compare/Write while turning it on. Then Compare/Write once again.	Version Check: N/A
AX3000G/B	Initialization: N/A	Preload: Hold up, down, and Exit while powering up, then press write	Version Check: N/A
C-Series Concert Pianos	Initialization: Hold MIDI/Transpose and Split buttons while turning it on.	Preload: Disk Load C900 (CFD01P) Ci86/9600 (CID00PE)	Version Check: N/A

CX-3/BX-3	Initialization: Hold Program 2 and 7 while turning it on	Preload: Hold Program 2 and 7 while turning it on	Version Check: Hold Program 1 and 8 while turning it on.
D Series/XD Series	Initialization: System, Disk Utility, Initialize Execute	Preload: Backup CDs	Version Check: Displayed while booting.
EA1, EM1, ER1, EA1MKII, ER1MKII	Initialization: Hold Transpose/Solo and write buttons while powering up. Press play once screen reads "PLD"	Preload: Hold Transpose/Solo and Write while powering up. Press play once screen reads "PLD"	Version Check: None
ES1, ES1MKII	Initialization: N/A	Preload: SM Card containing a backup of the Factory Preload.	Version Check: Hold down [SAMPLE] and [GLOBAL] while powering on.
EMX1	Initialization: Hold Transpose/Solo and write while powering up. Press play once screen reads "Preload, are you sure?"	Preload: Hold Transpose/Solo and Write while powering up. Press play once screen reads "Preload, are you sure?"	Version Check: Hold Shift and Pattern while turning on.
ESX1	Initialization: Hold Transpose/Solo and write while powering up. Press play once screen reads "Init, are you sure?"	Preload: SM Card containing a backup of the Factory Preload.	Version Check: Hold Shift and Pattern while turning on.
G3	Initialization: N/A	Preload: Hold Bank and Write while turning it on. Release both and then press Write again.	Version Check: N/A
i1/i2/i3	Initialization: Hold Edit/Style and Arrange/Play while turning it on.	Preload: Disk Load (IFD01P for i3 and i2, IFD02P for i1)	Version Check: Hold Enter and 7 while turning on.
I30	Initialization: Hold Arr.Play and Global while turning it on.	Preload: Disk Load (I30FD00P)	Version Check: Displayed while booting.
i5S/M	Initialization: Hold Arr.Play and Global while turning it on.	Preload: Disk Load (IFD00P)	Version Check: Hold Global while turning on.
iS35/40/50/B i40M	Initialization: Hold Arr.Play and Global while turning it on.	Preload: Disk Load (IFDD1006 except for iS40 and i40M which is FDD1007)	Version Check: Hold Disk/Global while turning on.
iX300	Initialization: Hold Arr.Play and Global while turning it on.	Preload: Disk Load (IXD00P)	Version Check: Hold Disk/Global while turning on.
KAOSS Pad KP1	Initialization: Hold 3, FX and HOLD buttons while turning it on. L appears in screen. Then press 1.3.5.1.3.5.	Preload: N/A	Version Check: N/A
KAOSS Pad KP2	Initialization (This one's a doosey): 1. Set the Connection Switch on back to "FX LOOP" 2. Hold down 3 button and TAP/BPM switch while power on 3. Release the button when the display reads "100". the display will convert to "00" 4. Set the Connection Switch to "Direct". The display will read "Lod" 5. Press and hold the Hold button while pressing the TAP/BPM button. After a series of digits appears on the screen, the KP2 will be initialized.	Preload: Same as Initialization	Version Check: N/A

KAOSS Pad KP3	Initialization: 1. [1] + [2] + [SAMPLING] while powering on 2. Press the blinking D button 3. When the display says P.off, cycle power	Preload: Same as Initalization	Version Check: [TAP/RANGE] + [SAMPLING]
KAOSSILATOR PRO	Initialization: 1. [1] + [2] + [RECORD] while powering on 2. Press the blinking D button 3. When the display says P.off, cycle power	Preload: Same as Initalization	Version Check: [TAP TEMPO] + [REC]
Kaoss Pad Quad (KP Quad)	Initialization: Initialized at startup	Preload: N/A	Version Check: N/A
KARMA	Initialization: Hold Enter and 0 while turning it on	Preload: Disk Load (KMFDOOP)	Version Check: Displayed while booting.
Kronos	Initialization: Use factory restore disks bundled with Kronos, then update to latest version. Note - Not recommended as first step in troubleshooting	Preload: FACTORY.PCG file from disk mode	Version Check: Global Mode - Options/Info tab. Also given on power up.
M1	Initialization: Hold Int, Card and Combi while turning it on.	Preload: Card Load (MPC00P) or Sysex Dump	Version Check: Hold INT while turning on.
M1R/M1REX	Initialization: Hold Int, Combi and Prog while turning it on.	Preload: Card Load (MPC00P, MPC0EX for EX model)	Version Check: Hold INT while turning on.
M3	Initialization: Hold Enter and 0 while turning it on	Preload: Global mode, top right drop down menu, "Load Preload/Demo Data"	Version Check: Displayed while booting.
M3R	Initialization: Hold Edit and No while turning it on.	Preload: Global screen 5D "OK", then select "O.K."	Version Check: Hold Edit and Global while turning on.
M50	Initialization: Hold Enter and 0 while turning it on	Preload: Global mode, top right drop down menu, "Load Preload/Demo Data"	Version Check: Displayed while booting.
microARRANGER	Initialization: Reload OS	Preload: Card Load	Version Check: Displayed while booting.
microKORG	Initialization: Initialized when preload is loaded	Preload: [WRITE] and program [5] buttons while powering on	Version Check: [WRITE] and Program [6] buttons while powering on
microKORG XL	Initialization: Initialized when preload is loaded	Preload: Global mode	Version Check: N/A
microSAMPLER	Initialization: Done via Edit menu (only initializes bank data)	Preload: Bank change to factory	Version Check: N/A
microSTATION	Initialization: PLAY/MUTE and 8 while turning on	Preload: Disk load, factory PCG file	Version Check: Displayed while booting.

microX	Initialization: [EXIT/CANCEL] + [PAGE+] & POWER ON	Preload: [EXIT/CANCEL] + [MENU/OK] & POWER ON	Version Check: Displayed while booting.
Monotribe	Initialization: Initialized at startup	Preload: To load DEMO sequence, hold ACTIVE STEP button and GATE TIME button and turn on. The monotribe will enter Global mode. Press Step Button 5 so the LED stays lit. Press the REC button to save and power back on.	Version Check: Hold Play and Gate buttons while turning on.
MS2000/2000R - MS2000B/2000BR	Initialization: Hold Mod Sequencer On/REC while turning it on.	Preload: Global screen 2D, then select "OK".	Version Check: Hold Mod Sequencer On/Off and 5 while turning on.
N1/N5/EX	Initialization: Test Mode - Hold Enter and 7 while turning it on, then Page> to skip to "Ready to Boot", press Enter.	Preload: Press Utility, select "Factory Reset" then press Enter.	Version Check: Hold 10s hold and Enter while turning on.
N1R	Initialization: Test Mode - Hold Global and Dec- while turning it on, Page> skips to "Ready to Boot", press Enter.	Preload: Press Global, Page > to Init. Select "Factory Preload" then press Enter.	Version Check: Hold Edit/Enter and Global while turning on.
nanoKEY	Initialization: Connect via USB to computer while holding down [OCTAVE DOWN] + [OCTAVE UP] + [MOD]	Preload: Same as Initalization	Version Check: N/A
nanoKEY2	Initialization: N/A	Preload: N/A	Version Check: Displayed on computer when updating version #
nanoKONTROL	Initialization: Turn on power while holding down [REC] + [STOP] + [SCENE]	Preload: Same as Initalization	Version Check: N/A
nanoKONTROL2	Initialization: N/A	Preload: N/A	Version Check: Displayed on computer when updating version #
nanoPAD	Initialization: Turn on power while holding down [HOLD] + [FLAM] + [SCENE]	Preload: Same as Initalization	Version Check: N/A
nanoPAD2	Initialization: N/A	Preload: N/A	Version Check: Displayed on computer when updating version #
N364/N264	Initialization: Hold Enter and Down Cursor while turning it on.	Preload: Disk Load (NSD3)	Version Check: Hold Enter and 7 while turning on.
NX/NS5R	Initialization: Hold Param. > and < while turning it on.	Preload: Enter button, then select Utility, Preset, Factory Preset, Yes.	Version Check: Hold Param < and> while turning on.
OASYS	Initialization: Reinit's each time it's powered up.	Preload: Loads on startup, but can also be loaded through the internal hard disk to restore presets after edits.	Version Check: Displayed while booting.
PA80/60	Initialization: Power up with O/S disk inserted & press Fade In/Out when prompted to press Enter	Preload: Disk Load (6 Disk set available from korgpa.com)	Version Check: Displayed while booting.
PA500/800	Initialization: Reload OS	Preload: Reload Factory Resources	Version Check: Displayed while booting.

PA1X/PA1XPRO PA80/60/50	Initialization: Reinitiates/loads operating system from SS Disk every time it's turned on.	Preload: Disk Load (6 Disk set available from korgpa.com)	Version Check: Displayed while booting.
PA2X	Initialization: Reload OS	Preload: Reload Factory Resources	Version Check: Displayed while booting.
PA3X	Initialization: Reload OS	Preload: Reload Factory Resources	Version Check: Displayed while booting.
padKONTROL	Initialization: 1 Hold down the [SCENE] key and press the [FIXED VELOCITY/PRELOAD] key. The [FIXED VELOCITY/PRELOAD] key will light, and the [SETTING/ENTER] key will blink. The display will indicate the preloaded scene number. 2 Use the encoder to select "ALL". 3 Press the [SETTING/ENTER] key. The display will blink "Lod" and loading will begin. After a time, the blinking will stop. Loading has been	Preload: Same as Initialization	Version Check: N/A
Prophecy	Initialization: Wheel 3 Hold & Octave (activates test mode and destroys RAM data)	Preload: Global screen 19, press Enter.	Version Check: Hold Enter and Exit while turning on.
PS60	Initialization: PERFORMANCE 4 and OCTAVE DOWN buttons while turning on	Preload: Global, Command, Preload, All, OK	Version Check: Displayed while booting.
Pandora MINI	Initialization: N/A	Preload: [Rhythm] + [A] while powering on, then [Utility/Enter]	Version Check: N/A
PX1	Initialization: Battery Removal	Preload: Metronome and Enter buttons while powering on. Then press the "+" button.	Version Check: N/A
PX2	Initialization: Battery Removal	Preload: Rhythm and Enter buttons while powering on. Then press the "+" button.	Version Check: N/A
PX3/PX3B	Initialization: Battery Removal	Preload: PX3: Rhythm/Aux and "+" button while powering on. Then press the Bypass/Tune button. PX3B: HBB and "+" button while powering on. Then press	Version Check: N/A
PX4/PX4B	Initialization: Battery Removal	Preload: PX4: Rhythm and UP arrow buttons while powering on. Then press Enter/Rec. PX4B: Rhythm and Up arrow buttons while powering up. Then press press	Version Check: N/A
PX5D	Initialization: N/A	Preload: [Rhythm] + [UP arrow] while powering on, then [Enter/Rec]	Version Check: N/A
R3	Initialization: N/A, initialized when preload is loaded	Preload: While unit is already on, hold down the [SHIFT] button and press the [7] button	Version Check: [EXIT] while powering on
RADIAS	Initialization: N/A	Preload: Global mode, page 3	Version Check: OSC1 [OSC MOD] + MOD SEQ [REC] while powering on

S3	Initialization: Hold Stop and S1 while turning it on.	Preload: Hold Stop and S1 while turning it on.	Version Check: Hold Stop and S4 while powering on.
SG Rack	Initialization: Edit and Yes while turning it on.	Preload: Global screen 7, then select "O.K".	Version Check: Hold Edit and FX On/Off while turning on.
SGPROX	Initialization: Hold Program and Piano 8 while turning it on.	Preload: Program Edit mode screen 14 (Each program!)	Version Check: Hold Program and Piano 7 while turning on.
SP500	Initialization: Hold Function and Mixer while turning it on.	Preload: Function screen 7.	Version Check: Hold Function and Mixer while turning on.
SV-1	Initialization: Hold Function while turning it on, press the blinking Function button again	Preload: Same as Initalization	Version Check: Turn the SV-1 on, then press the SPEED and INTENSITY knobs in the PRE-FX section. The operating system version is always given in the format "n1.n2", for example "1.0" for major release 1, minor revision 0. The number shown around the SPEED knob gives you the first part (n1), while the number shown around the INTENSITY knob gives you the second part of the operating system version number (n2).
T Series	Initialization: Hold Fine and Prog A while turning it on.	Preload: Disk Load (TSD00PII)	Version Check: Hold Fine and Program A while turning on. Please note that this will initialize your settings and sounds so back them first.
Trinity Series	Initialization: Hold Enter and 0 while turning it on	Preload: Disk Load (TFD00P and TFD01P)	Version Check: Displayed while booting.
Triton Classic/ST/EX	Initialization: Hold Enter and 0 while turning it on	Preload: Disk Load (TNFD00P and TNFD01P for Classic, Hard Drive contains preload for Studio)	Version Check: Displayed while booting.
Triton LE/TR	Initialization: Hold Enter and 0 while turning it on	Preload: Global mode, F8, Select "Preload"	Version Check: Displayed while booting.
Triton Rack	Initialization: Hold Enter and 0 while turning it on	Preload: Disk Load (TNRFD00P and TNRFD01P)	Version Check: Displayed while booting.
TRR	Initialization: Hold A4 and Edit while turning it on.	Preload: Global screen 10, then select "OK".	Version Check: Hold Enter and Yes while turning on.
Wavedrum/Wavedrum ORT	Initialization: N/A, just load preload	Preload: WRITE button while powering on. After "PLd" is displayed, hold down the blinking WRITE button for about one second. The factory settings will start being loaded. Cycle power when it says "End".	Version Check: Hold [1] while powering up.
Wavedrum MINI	Initialization: N/A, just load preload	Preload: Hold down record button while powering on. Then when screen says "PL", release button then hold it down for 2-3 sec	Version Check: N/A
WS/WSEX/AD	Initialization: Power on, wait for "Wavestation" to flash then Cursor down and 4. Enter Init screen from there.	Preload: Card Load (WPC00PI, II and III)	Version Check: Power on, wait for "Wavestation" to flash then Cursor down and 4.

WSSR	Initialization: Hold Down Cursor, Bank, Edit and Yes while on. Enter Init screen from there.	Preload: Card Load (WPC00PI, II and III)	Version Check: Hold Down Cursor, Bank Edit and Yes while on.
X2/X3/X3R	Initialization: Hold Page Down and 0 while turning it on	Preload: Disk Load (XFD00P)	Version Check: Hold Enter and 7 while turning on.
X5/X5D/DR	Initialization: Hold PROG and +10 while turning it on.	Preload: Global Screen 5A, then select "OK".	Version Check: Hold Edit and Global/Multi while turning on.
X50	Initialization: [EXIT/CANCEL] + [PAGE+] & POWER ON	Preload: Either from global mode or [EXIT/CANCEL] + [MENU/OK] & POWER ON	Version Check: Displayed while booting.
Z1/Z1EX	Initialization: Hold down SW1 and SW2 while turning it on.	Preload: Preload screen in global mode.	Version Check: Hold Exit and Enter while turning on.