


A

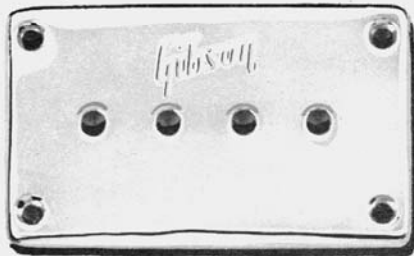


B




C




D

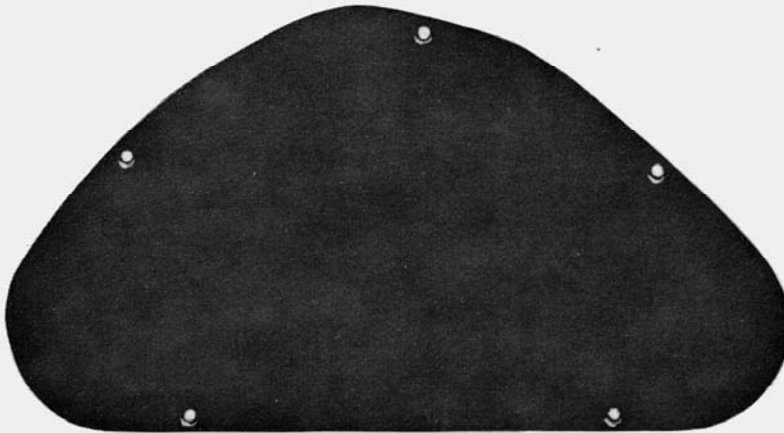


E

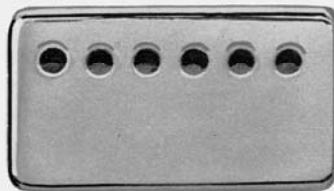


F

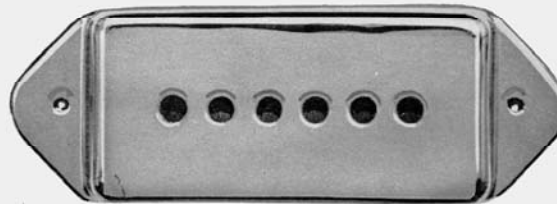

H

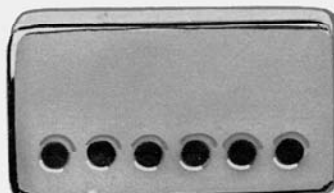


G

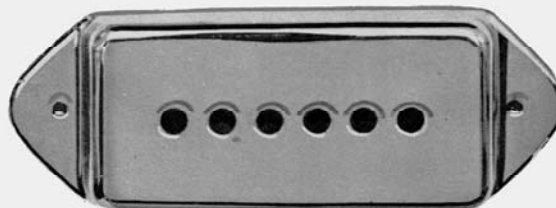

I

Pickup covers


- A Cover front or back**
13949 Black
13925 Cream
- B Front cover**
13912 Nickel
EBO, EBO2, EB3, EB3-L, EB2,
- C Back cover**
70577 Nickel
EB-3, EB-3-L, EB-20
- D Cover for J160-E**
13901 Black
- E Back control plate for S.G. series**
19300 Black
- F Front or Back Cover**
70569 Nickel
- G Front or Back Cover**
70668 Gold
- H Front cover**
13920 Nickel
ES-330, 125 Series
- I Back cover**
13904 Nickel
ES-330, 125 Series

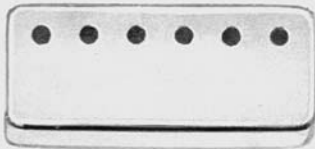


A




C

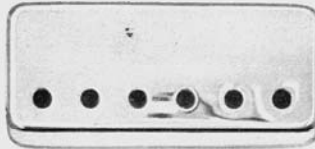

B

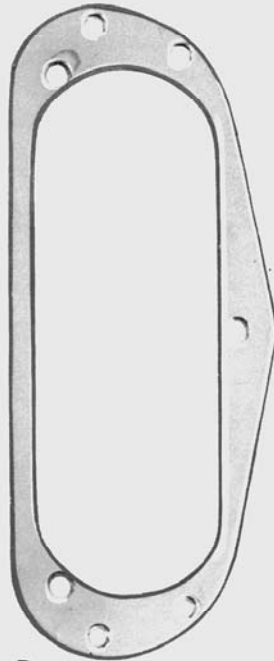


D

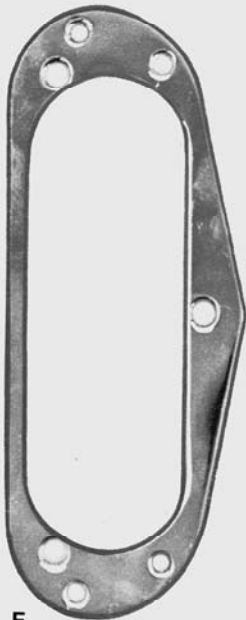

E



F

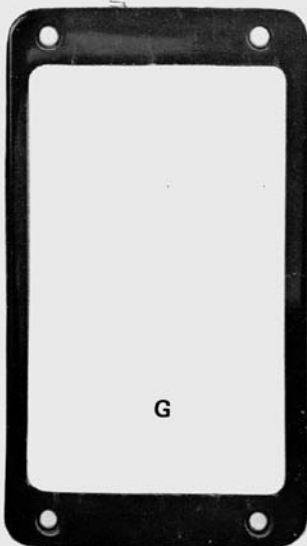

G



H



I

Pickup covers

- A Front**
70574 Nickel
- B Back**
70574 Nickel
- C "1958" style knob**
19264 Gold
19267 Black

Pickup mounting rings

- D** 70402 Nickel
For L.P. bass
 - E** 70404 Nickel
For L.P. recording
 - F Back mounting ring 1/2" — tapered**
For humbucking pickups
13850 Black
13891 Cream
 - G Front mounting ring-flat**
13865 Black
For bass pickups
 - H Back mounting ring 3/8" hi-tapered**
For humbucking pickups
13851 Black
13893 Cream
 - I Mounting ring 1/4" hi, flat front or back**
13868 Black
For solid body
- Cream mounting rings - tapered**
13891-1/2" Cream
13892-1/4" Cream
13893-3/4" Cream [3/8"]
13884-1/8" Black
Mounting Ring



A



B



C

Pickup mounting rings

**A Front mounting ring 1/4" hi/
tapered**

For humbucking pickup
13852 Black
13892 Cream

B Back mounting ring
13864 Black
For EB-3, EB-2D

For new S.G. Special
Front - 13959
Back - 13960

C Mounting rings

front or back
13946 Cream
13965 Black
For L.P. Deluxe